HOME DECORATORS
collection®

BF-24667 MSL DEEP CUBBIE PAPER 13"Hx21"W

ASSEMBLY INSTRUCTIONS

Made In China

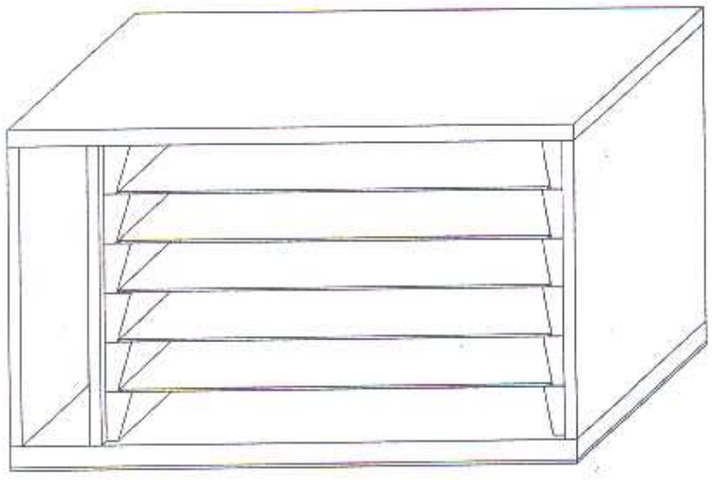

Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts,which may have came loose inside the carton during shipment. Count all parts and material hardware,Compare with parts list to be sure all part are present.If any parts are missing or damaged,phone,fax,or mail to our Customer Service Department.For efficient and speedy service please indicate the model number and code letter of part(s)need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D BOTTOM PANEL-1PC	E  STAND PANEL-1PC	F SHELF PANEL-5PCS
G BACK PANEL-1PC	H CAM-TOOL-1PC	I CAM-BOLTS-6PCS
J CAM-LOCKS-6PCS	K SCREWS-14 PCS	L DOWEL-6PCS

M CAM-LOCKS CAP-2PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

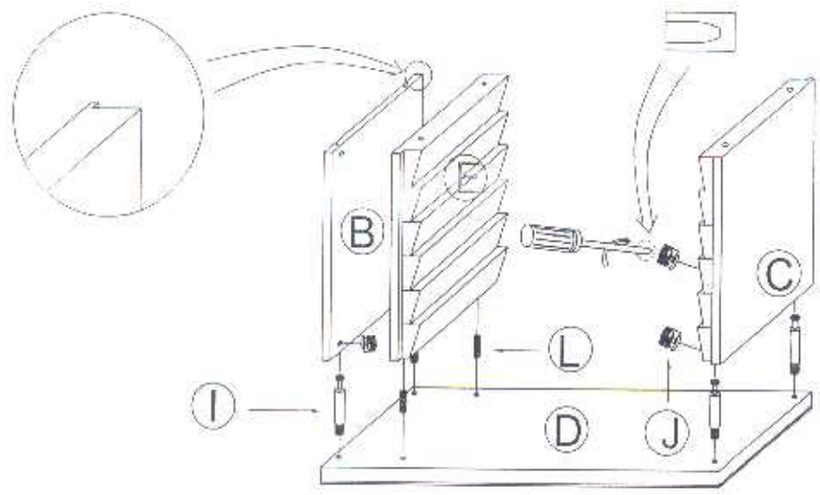

1). ASSEMBLE THE BOTTOM PANEL(D).

- ROTATE THE 3 CAM-BOLTS(I)AND INSERT THE 3 DOWELS(L)INTO HOLES IN BOTTOM PANEL(D).
- PLACE THE CAM-BOLTS(I) INTO HOLES IN PANEL(B/C)AND ATTACH USING 3 CAM-LOCKS(J).

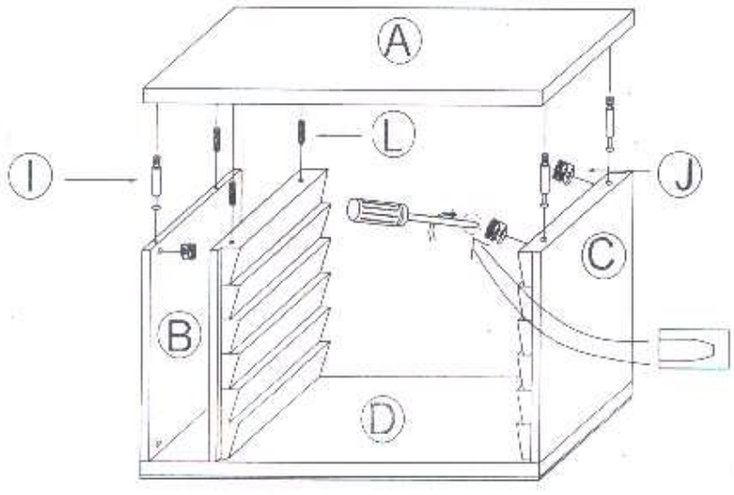

2). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 3 CAM-BOLTS(I) AND INSERT THE 3 DOWELS(L)INTO HOLES IN TOP PANEL(A).
- PLACE THE CAM-BOLTS(I) INTO HOLES IN PANEL(B/C)AND ATTACH USING 3 CAM-LOCKS(J).

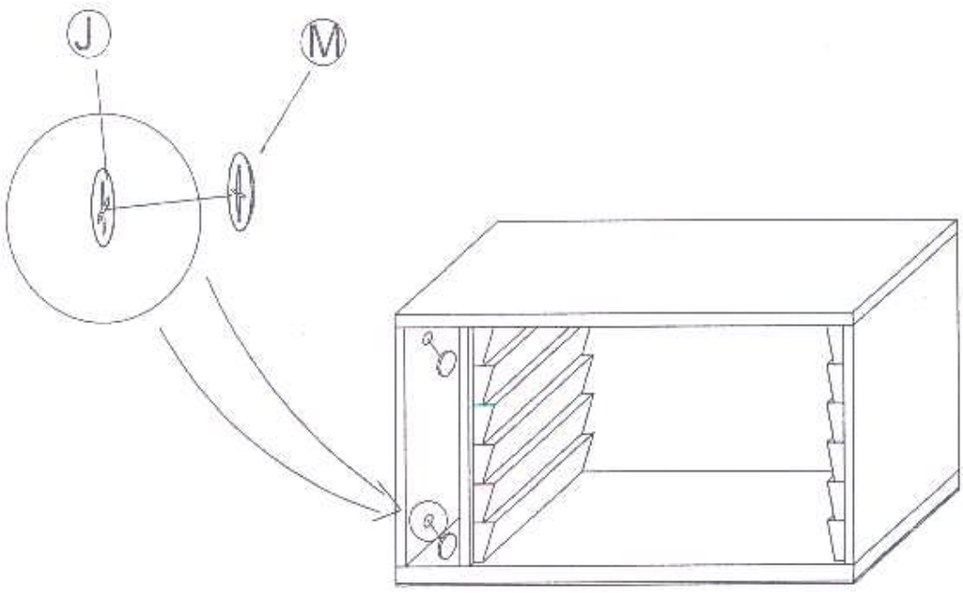

3). ASSEMBLE CAM-LOCKS CAP(M)

- ATTACH THE 2 CAM-LOCKS(J)USING 2 CAM-LOCKS CAP(M).

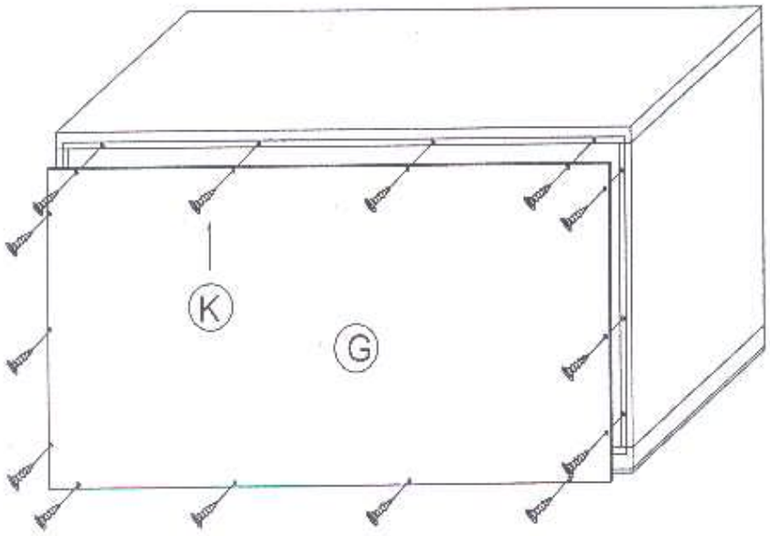

4). ASSEMBLE BACK PANEL(G).

- ATTACH BACK PANEL(G)USING 14 SCREWS(K).

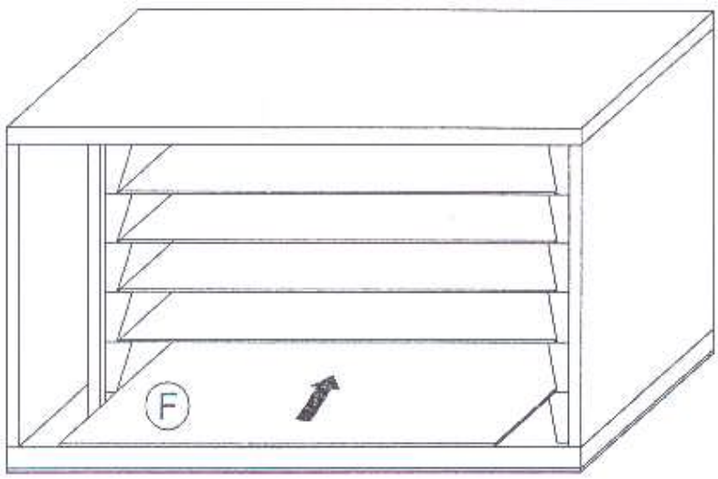

5). ASSEMBLE SHELF PANEL(F).

- SLIDE ALL THE SHELF PANEL(F) INTO CUBBIE.